


INSTALLATION INSTRUCTIONS FOR NOSE OVER/FLUSH COVERS

IMPORTANT NOTE:

Before application of RAINTRAP™ or PRO FLOW™ gutter protection begins the following steps must be taken to ensure proper performance of the product.

- 1: All gutters and downspouts must have all debris removed.
- 2: All gutters must be flowed for proper drainage.
- 3: All straining devices or other existing gutter guards must be removed.
- 4: All gutters must be secured properly to the structure.

STEP 1

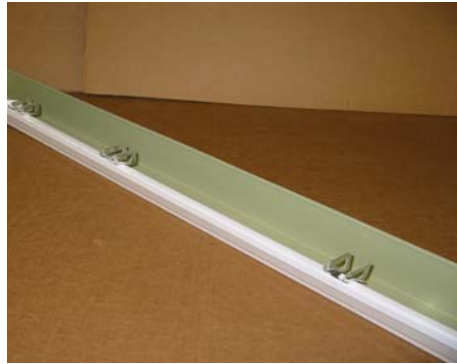

FASTEN CLIPS TO THE GUTTER USING ZIP SCREWS NEXT TO THE VALLEY TROUGH AND APPROXIMATELY 20" AND 40" FROM THE INSIDE CORNER.

STEP 2



BEND THE TABS ON THE CLIPS DOWN AND TO THE SIDE SO THE GUTTER COVER CAN BE INSERTED.

STEP 3



CUT THE END OF THE PIECE OF COVER AT 45° AND SLIDE THE COVER UNDER THE FIRST ROW OF SHINGLES. SLIDE THE COVER TO LINE UP WITH THE INSIDE MITER .

STEP 4



TURN TABS UP ON CLIPS SECURING COVER INTO PLACE.

STEP 5



REPEAT STEPS 4 TO 6 TO INSTALL SECOND PIECE OF GUARD TO COMPLETE THE INSIDE MITER. THE TWO PIECES OF GUARD SHOULD OVERLAP APPROXIMATELY 1".

STEP 6



FASTEN THE NEXT CLIP AT THE END OF THE INSTALLED SECTION OF COVER OVERLAPPING AS MUCH AS POSSIBLE.

STEP 7



SLIDE THE SECTION OF COVER TO COMPLETELY OVERLAP CLIP.

STEP 8



FASTEN THE NEXT TWO CLIPS APPROXIMATELY 20" AND 40" FROM THE PREVIOUS CLIP.

STEP 9



BEND THE TABS DOWN ON ALL THREE CLIPS TO ACCEPT THE NEXT PIECE OF COVER.

STEP 10



INSTALL THE NEXT PIECE OF GUARD BY SLIDING IT UNDER THE SHINGLES AND OVERLAPPING THE PREVIOUS PIECE BY A MINIMUM OF 1". TURN TABS UP TO SECURE PIECE. REPEAT STEPS 9 TO 13 TO THE END OF THE RUN.

STEP 11



AT THE END OF A RUN CUT AND BEND DOWN A TAB TO COVER THE END OF THE COVER TO PREVENT BIRDS OR SQUIRRELS FROM ENTERING.

NOTE: OUTSIDE CORNERS SHOULD OVERLAP APPROXIMATELY 1" LIKE INSIDE CORNERS.